
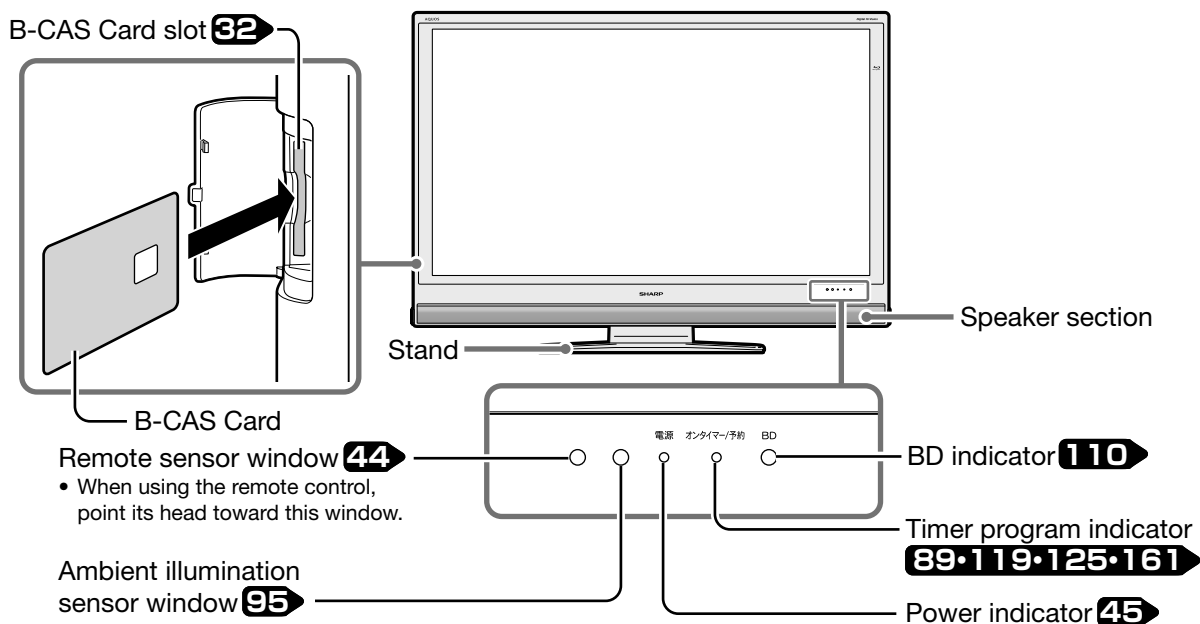


# Part Names – Main Unit English Guide

- The number shown in each  is the page number where the part's function and/or use are explained in Japanese.

## Front view




### Adjusting the LCD panel angle **35**

- The LCD panel can be rotated horizontally up to 20° clockwise and counter-clockwise.
- Hold the stand firmly when you adjust the monitor's angle.

## Control panel

Right side view

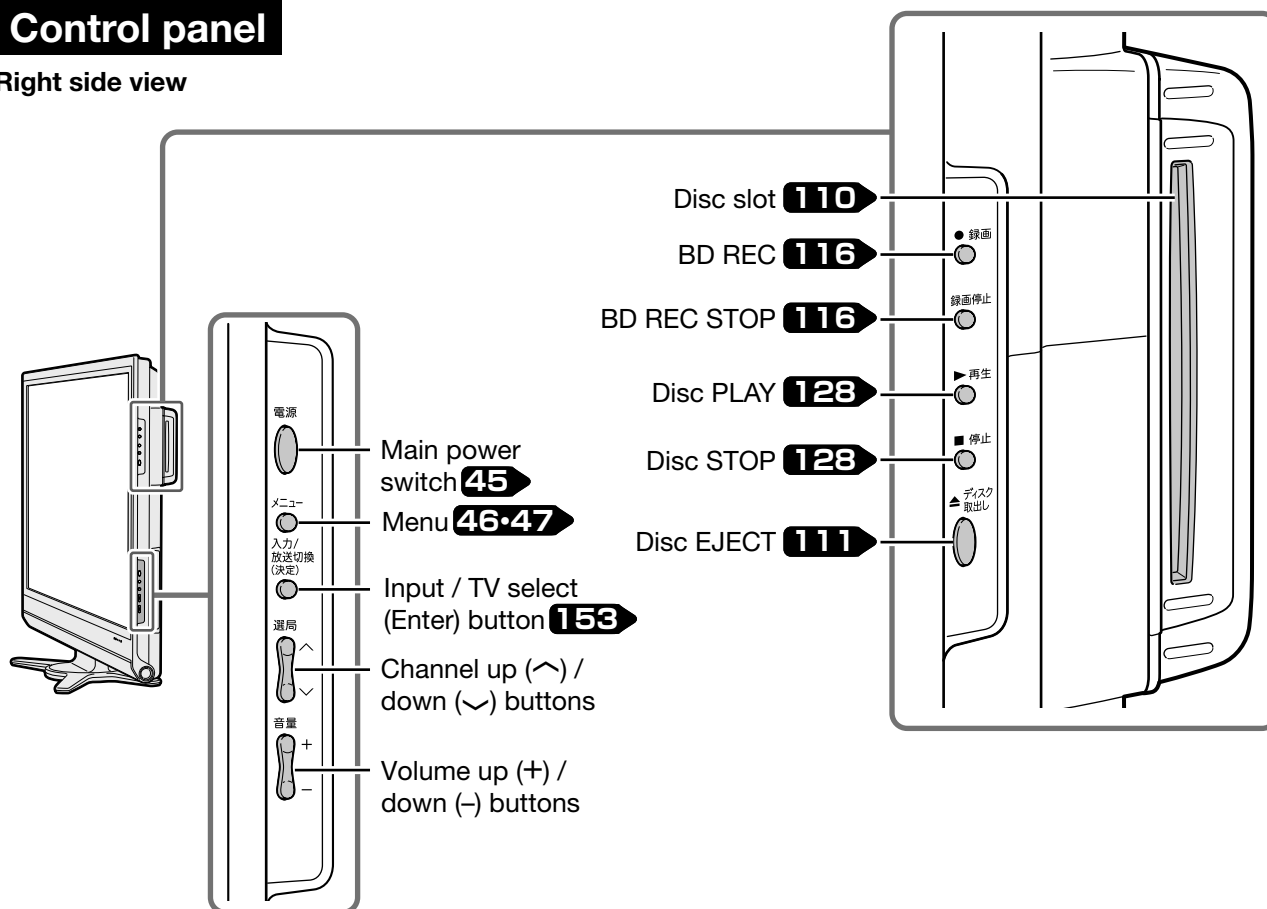

## Back view

The illustrations below are those of LC-52DX1.

LC-46DX1/LC-42DX1/LC-37DX1 have almost the same layout of jacks and terminals as LC-52DX1.

LAN jack  
(10BASE-T/100BASE-TX)  
**183**

Connect a Blu-ray  
Disc player,  
AV amplifier, etc.

AV in 1 (HDMI)  
**150~151・152・  
157・166・170**

AV in 5  
**150~151・166**

AV in 3 **150~151・166**


RS-232C **178**

AV in 6 (PC) **171**

Connect the telephone line

Telephone line jack **183**

### ▼LC-52DX1/LC-46DX1/LC-42DX1/LC-37DX1

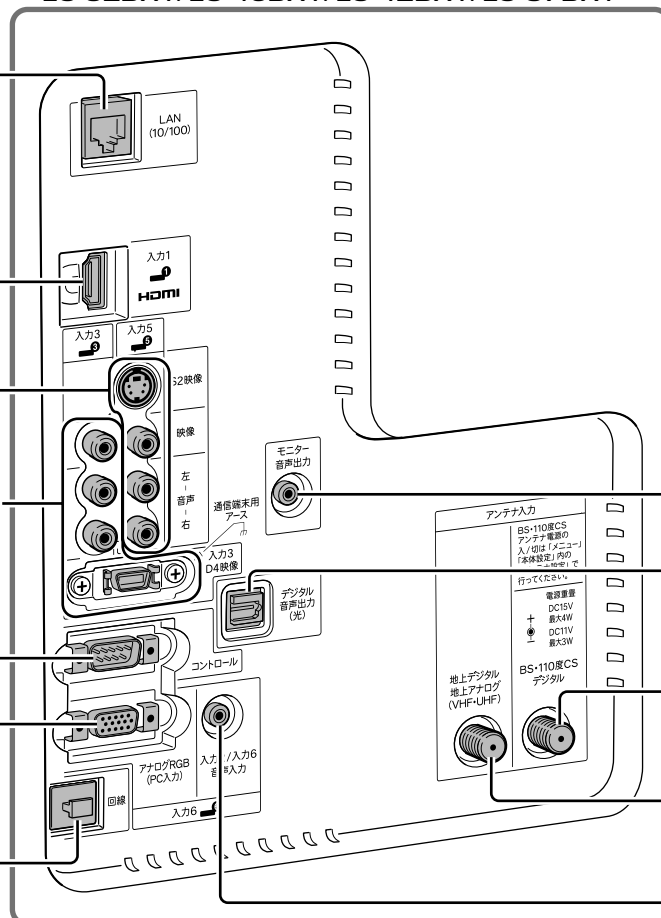

Monitor out  
(REC OUT) **169**


Digital audio  
output jack  
(optical) **157・168**

BS-CS 110 antenna  
input terminal  
**37~39**

VHF-UHF antenna  
input terminal  
**36~39**

PC input (audio)  
**170~171**

### LC-52DX1▼

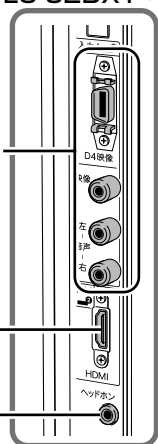


Connect a video  
game equipment,  
video camera, etc.

AV in 4 **150~151・166**

AV in 2 (HDMI)  
**150~151・152・  
157・166・170**

Headphones jack

### LC-46DX1/LC-42DX1/LC-37DX1▼

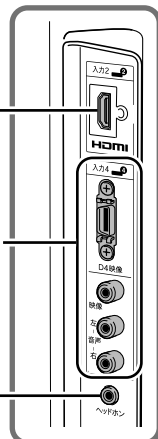


AV in 2 (HDMI)  
**150~151・152・  
157・166・170**


AV in 4 **150~151・166**

Connect a video  
game equipment,  
video camera, etc.


Headphones jack

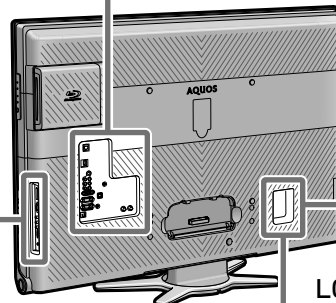

LC-52DX1/  
LC-46DX1/  
LC-42DX1▶

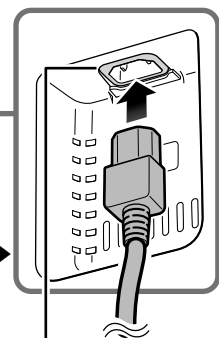

### ▼LC-37DX1

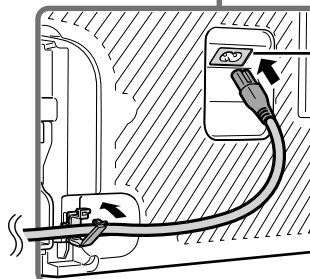

Connect the AC cord

AC cord connector  
(AC 100V) **41**

The provided power  
connector may have  
different shape from that  
shown in the drawing.

はじめに

準備

番組を見る

内蔵B/Dで  
録画・再生

ヒューズ・リレー  
パソコンなどに  
つなぐ

ファミリンク  
で録画・再生

本機の機能の  
活用

故障かな・仕様  
寸法図など

English  
Guide

# Part Names – Remote Control Unit

## Active/Standby 45

Press to engage the TV set in the active or standby mode.

## Channel select 73

- Press to select a channel.
- Use to input a number for various settings.

## Terrestrial analog/Terrestrial

## Digital/BS/CS 72

Select the CS digital channel for the first time. 51

## Linked data broadcast

76 • 88 • 136

## Mute 73

Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

## Volume up (+)/down (-) 73

Press to adjust the volume.

## EPG 78 • 80 • 118 • 161

Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast. Select a future program in EPG to set a timer program.

## Finish 46

Press to finish menu operation, etc.  
\* This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

## Other on-air programs 79

Press to display the EPG for currently on-air programs only (裏番組).


## Display 74

Press to display or turn off the channel call, etc.

## Playback programs recorded on a disc 128

Fast forward, rewind, etc. during playback 134~135

See Page 72 for how to select a program.

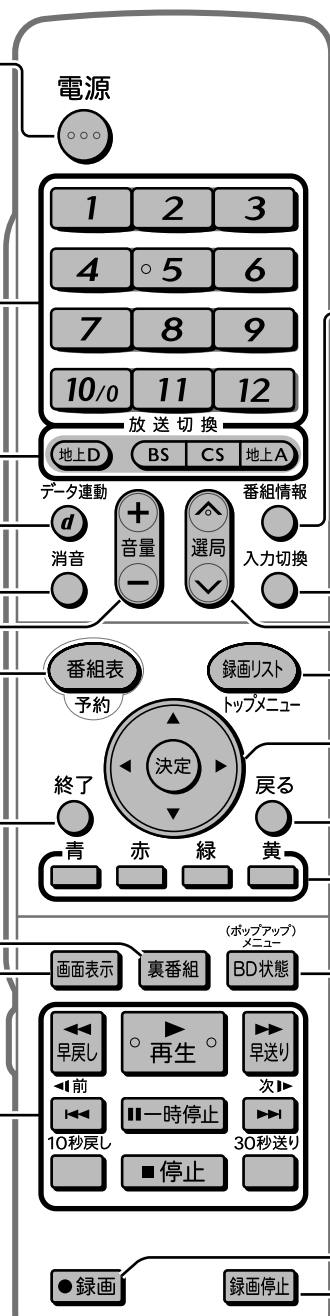

## Program info 87

## Input select 153

## Channel up (^)/down (v) 73

Press to select channels in the current network, media and CATV channels in the ascending or descending order.  
\* CATV channels are factory set to be skipped.

## List the programs recorded on a BD 129

Display the Top Menu of the disc 131

## Cursor (up, down, left, right) 46

## Enter/Confirm 46

## Return 46

## Color 80~81 • 88

Use to operate EPGs and data program screens.

## View status of the BD 124

Display the Pop-up Menu (BD) or Disc Menu (DVD) 131

## Buttons under the cover

Hold the cover by the projections ( ) and lift.

## AV mode select 93

## Audio select 84 • 85 • 136

## Picture select 85 • 137

## Caption 85 • 136

## Favorite channel select/register 75

## Freeze 86

## Display the Playback Menu 138

## Sleep timer 204

## Screen mode 90 • 172

## Menu 46

Press to display or turn off the menu screen.

## Media select (TV/data) 72


## CATV 76

## Digital channel number input 75

## Eject the disc 111

## Familink 160 • 162~165


Press to operate "Familink" Recorders and AQUOS Audio connected via HDMI cables.

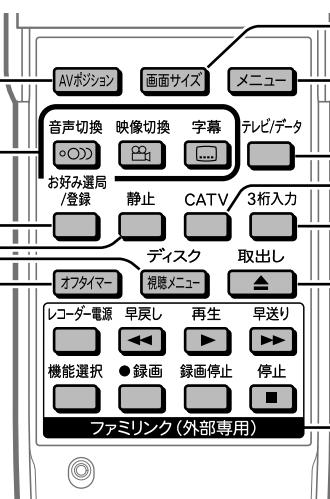

# Switching the Display Language to English メニューなどの言語を英語にする

- Using the menu screen, you can switch the on-screen display language to English.

メニューなどの画面表示を英語にすることができます。

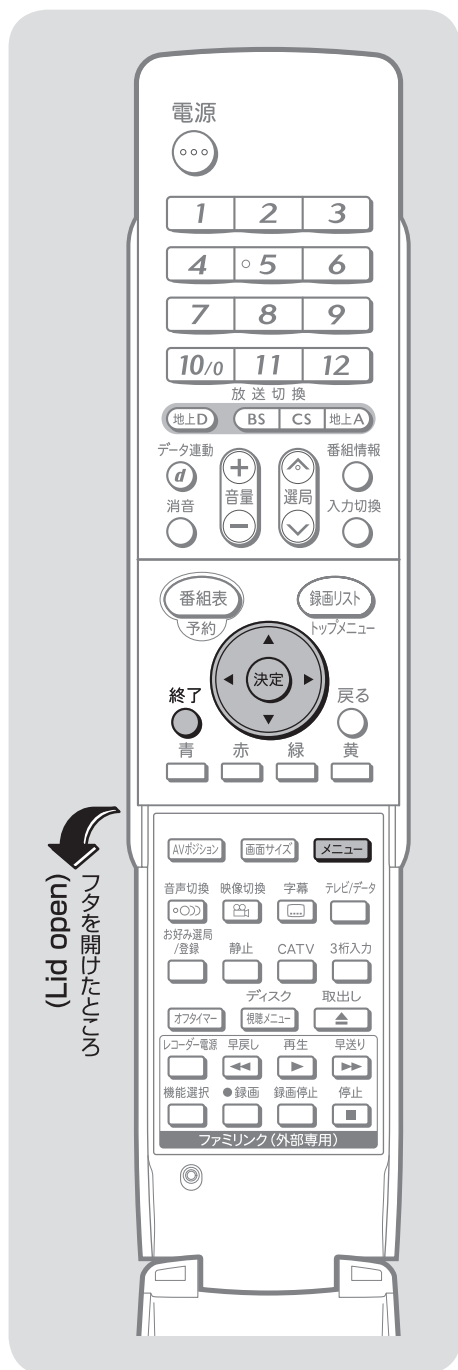

# 1

Press  
メニュー

Display the menu screen.  
メニューを表示する


# 2

Select with  
決定

Press  
決定

Select “本体設定” (Setup) — “Language (言語設定)” and Enter.

「本体設定」－「Language (言語設定)」を選ぶ

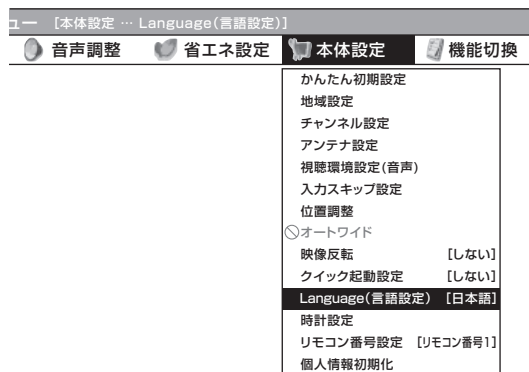


# 3

Select with  
決定

Press  
決定

Select “English” and Enter.

「English」を選ぶ

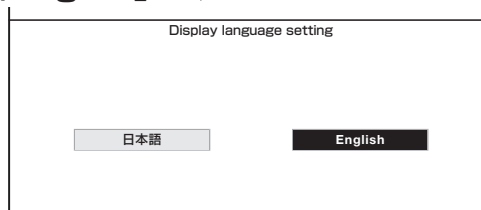

- The menu screen is now displayed in English.
- 画面表示が英語になります。

# 4

Press  
終了

Finish this operation.

終了する

はじめに

準備

番組を見る

BDRレコーダー  
機能で録画・再生

リーダープレーヤー  
パソコンなどに送る

ファミリーリンク  
で録画・再生

本機の機能の  
活用

故障かな・仕様・  
寸法図など

English  
Guide



お知らせ

誤ってメニューを英語にしてしまったときは

- メニューから「Setup」－「言語設定 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。